


***NOTE:**


Install the Erosion Control Blankets 3ft (900mm) behind the shoulders of the slope onto flat final grade. Secure roll end with a single row of staples on 1 ft. (300mm) centers

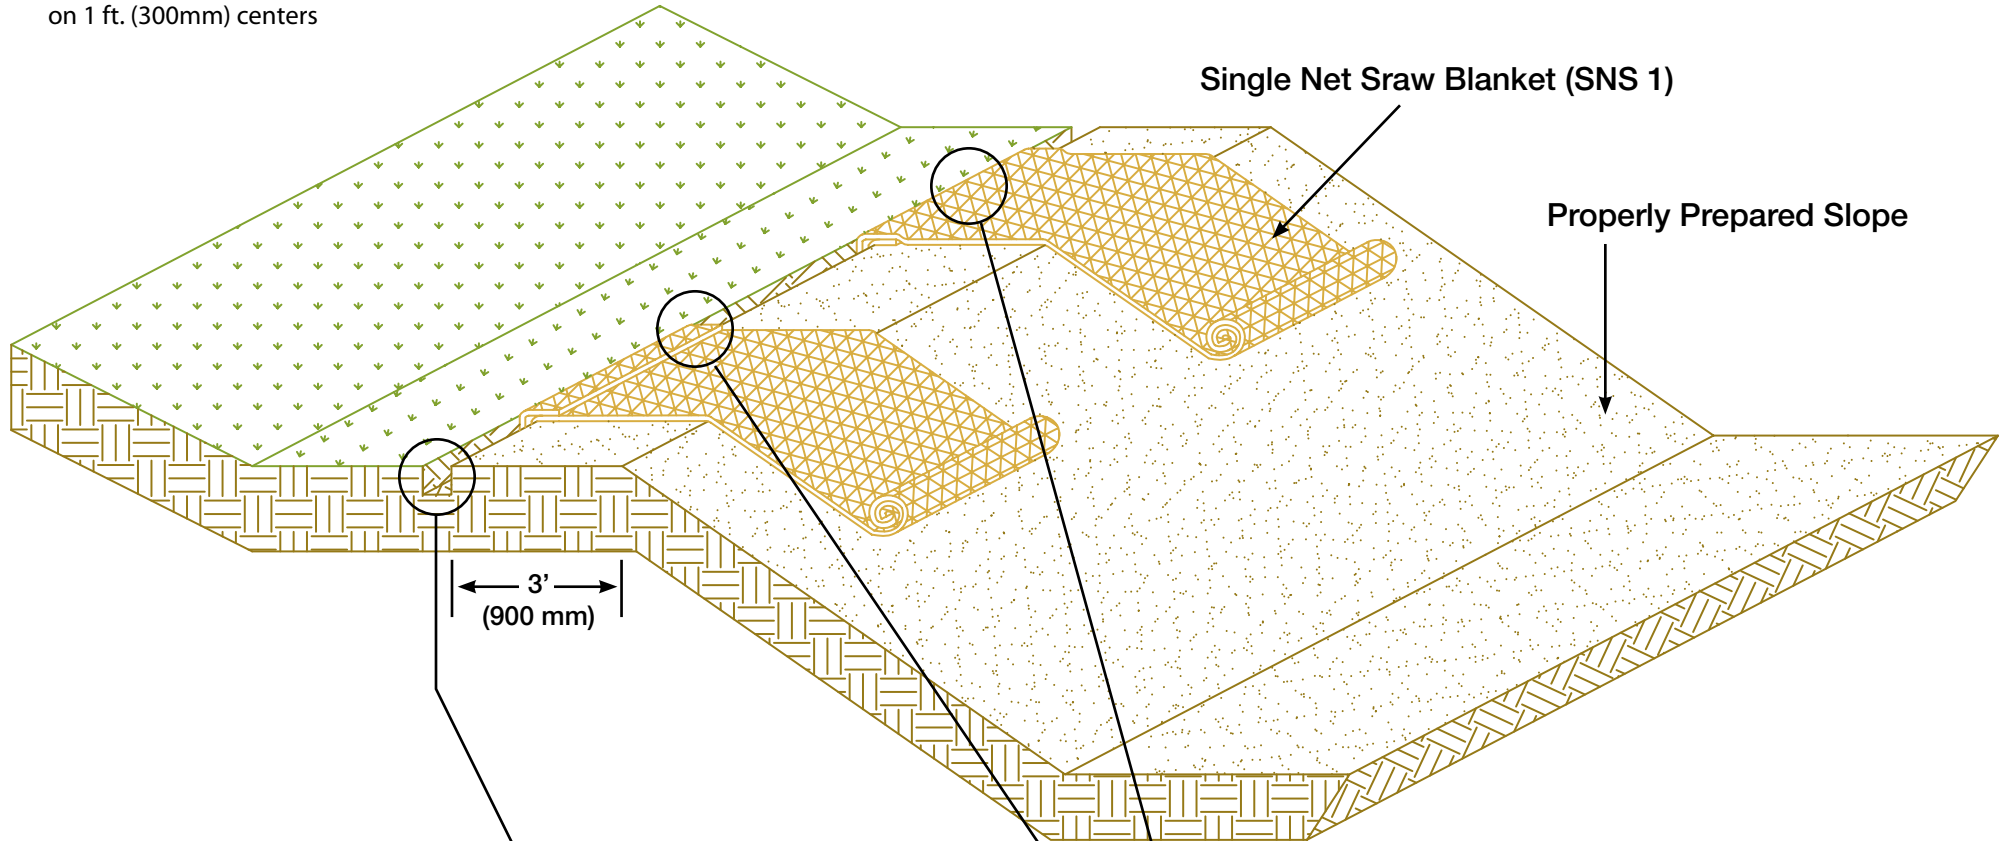


3'
(900 mm)

Single Net Sraw Blanket (SNS 1)

Properly Prepared Slope

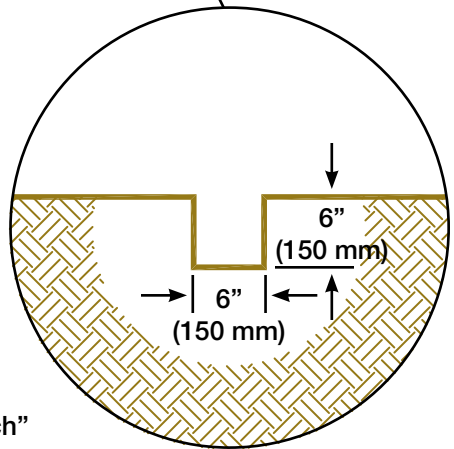

DETAIL 1A
"Anchor Trench"

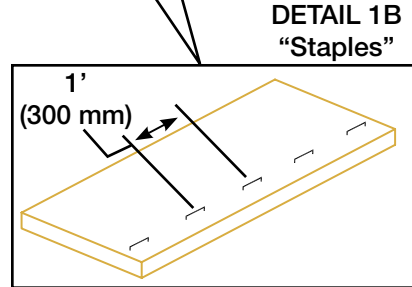



DETAIL 1B
"Staples"

**SNS 1 SLOPE INSTALLATION
DRAWING 1**



MANUFACTURED BY: INDUSTRIAL FABRICS, INC.
510 O' NEAL LANE • BATON ROUGE, LA 70819
800-848-4500 • WWW.GREENSOLUTIONS.US

*NOTE:
Netting to be on top of blanket.

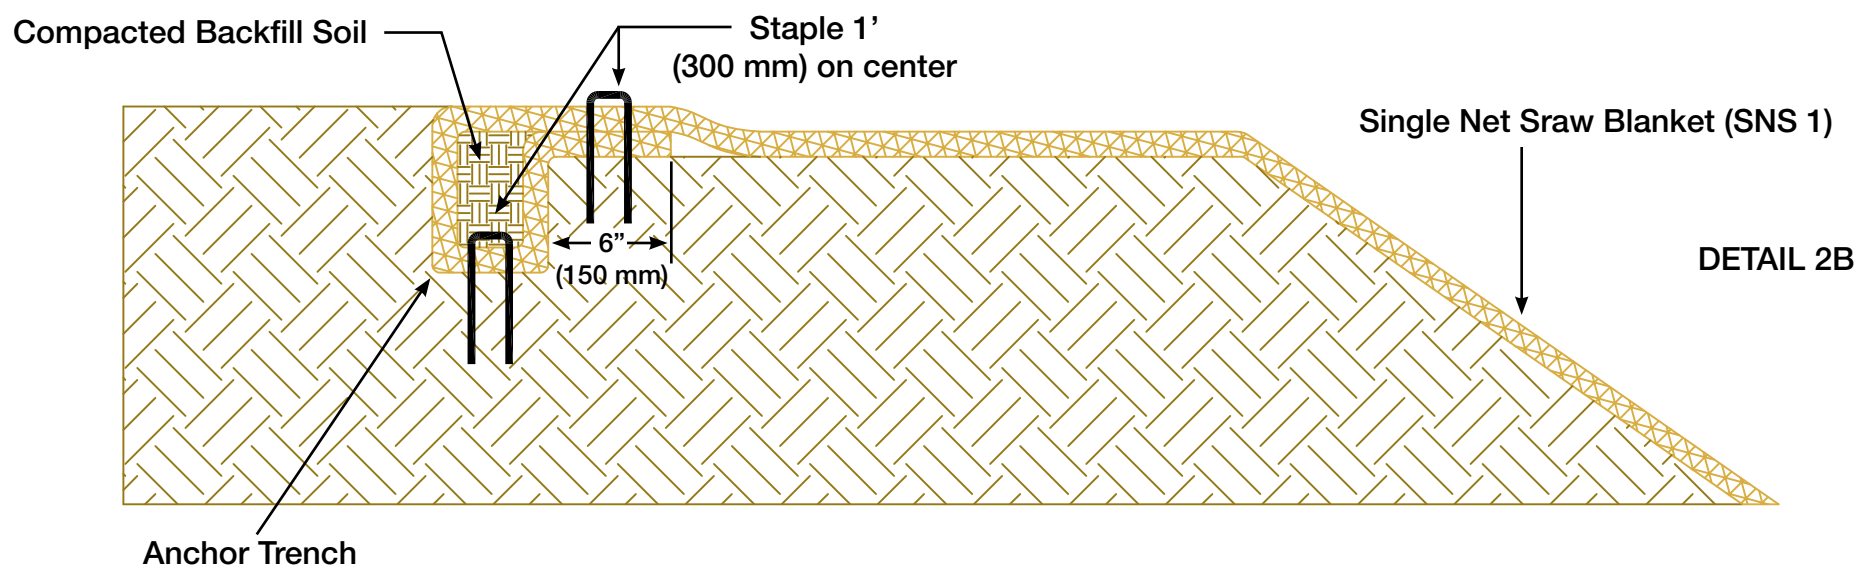
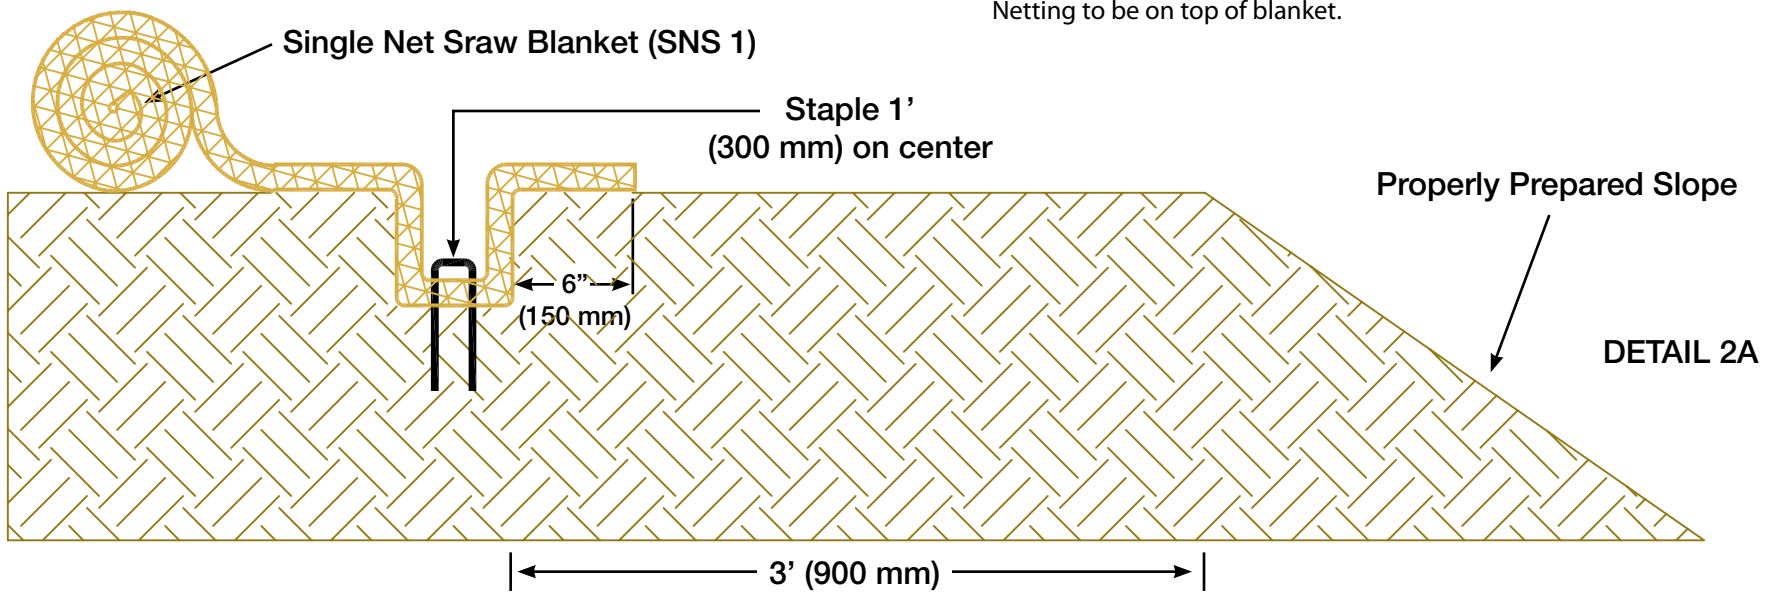


**SNS 1 SLOPE INSTALLATION
DRAWING 2**





MANUFACTURED BY: INDUSTRIAL FABRICS, INC.
510 O' NEAL LANE • BATON ROUGE, LA 70819
800-848-4500 • WWW.GREENSOLUTIONS.US


*NOTE:
Referr to www.greensolutions.us
for recommended staple pattern

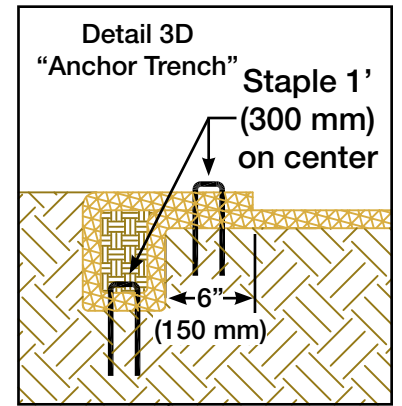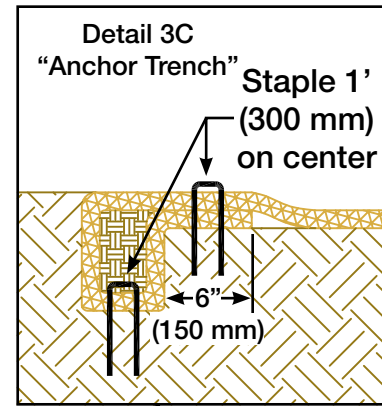

Single Net Sraw Blanket (SNS 1)

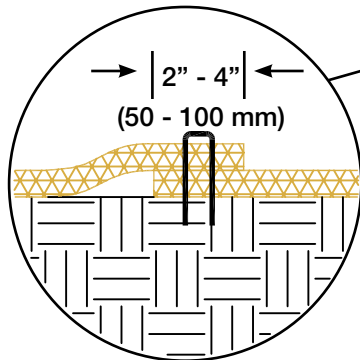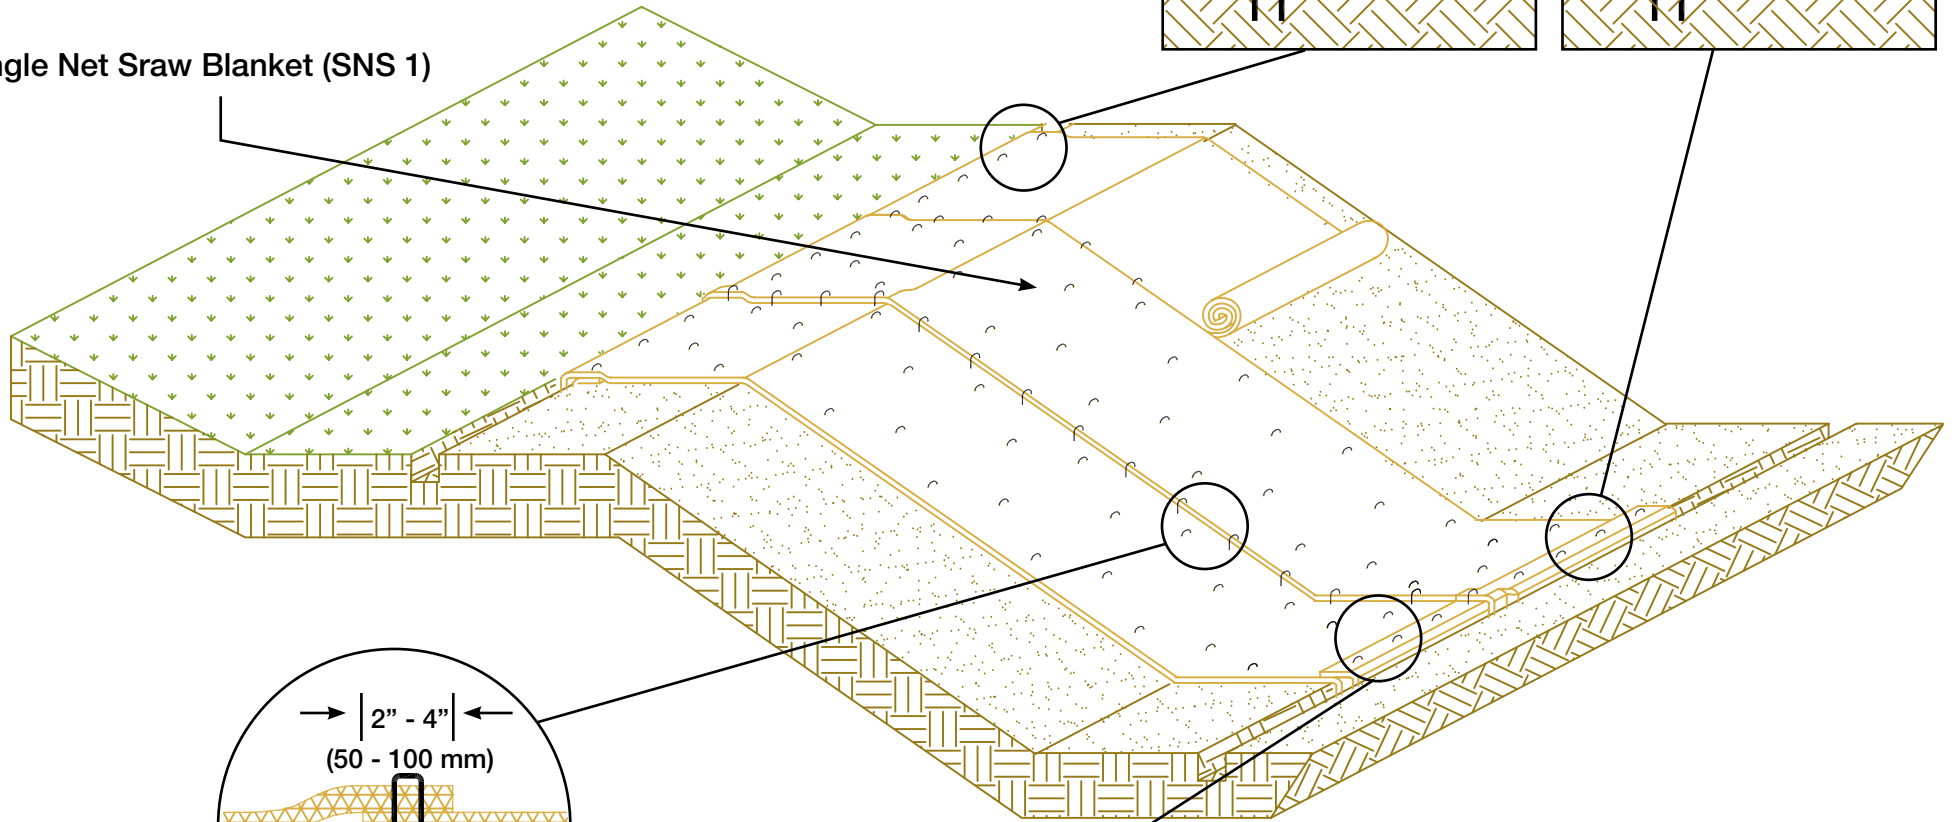

Detail 3A
"Overlap"

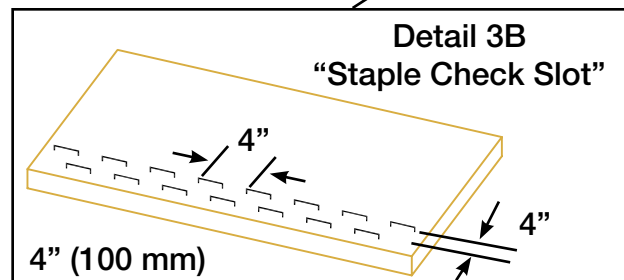

SNS 1 SLOPE INSTALLATION DRAWING 3

 **GREENSOLUTIONS™**
QUALITY EROSION CONTROL BLANKETS

MANUFACTURED BY: INDUSTRIAL FABRICS, INC.
510 O' NEAL LANE • BATON ROUGE, LA 70819
800-848-4500 • WWW.GREENSOLUTIONS.US